

# Sprinkler Head Settings - Silver

The sprinkler head supplied is a fully adjustable sprinkler that will operate in a full circle pattern or any part of a circle by adjusting the stops at the base of the sprinkler. Refer to the instructions below to set sprinkler head to the desired operating pattern.


## Step 1



## Part Circle Operation - Silver


**Step 1)** Locate the adjustable stop clips at the base of the sprinkler shown by the arrows in the left image. Also locate the reverse trip lever indicated by the yellow circle. The reverse trip lever engages the adjustable sprinkler stops allowing the sprinkler head to operate in a part circle mode.

## Step 2

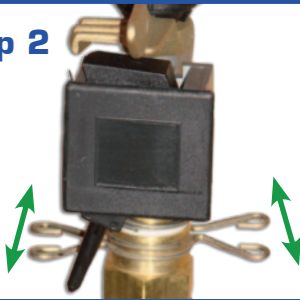

**Step 2)** The adjustable stop clips may be moved around to any position on the sprinkler base to facilitate part circle operation. The clips are easy to move if you place your thumb inside the two prongs on the chosen clip and simply push the stop clip around to the desired setting. One stop clip will be the right side stop for the reverse trip lever to engage and the other stop clip will be the left side stop for the reverse trip lever to engage. Sprinkler will then operate back and forth between the stop clips in the desired pattern set by the adjustable stop clips.


## Step 3

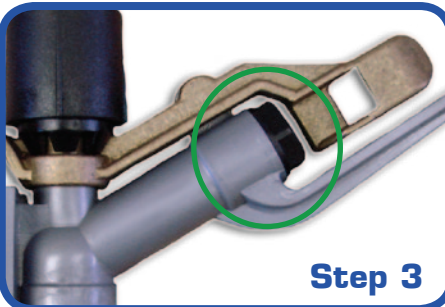

**Step 3) Nozzles Supplied:** Your sprinkler head is supplied with a set of nozzles that are interchangeable to meet your water source's capability. It is shipped with the smallest nozzle installed. If your water system operates the small nozzle adequately then, you may move up to a larger nozzle size for increased performance. The nozzle sizes listed on your supplied performance charts have gallons per minute output that tally at various pressures and wetted patterns that correspond. This may be a trial and error exercise to determine which nozzle size gives you the best desired performance when matched to your water source's capability. You may feel more comfortable consulting your servicing well dealer for help with your system's capability if desired performance is not being met.

It may also be necessary to purchase a booster pump from our pump section of BigSprinkler.com if pressure boosting is needed. Please contact us at 855-805-7901 with any questions regarding your BigSprinkler products.

## Step 1

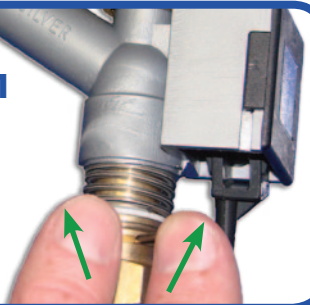

## Full Circle Operation - Silver

**Step 1)** For full circle operation, the adjustable stop clips must be removed. By spreading the stop clips and pushing back and away from you, the stop clips may be removed from the machined groove in the sprinkler base. When the stops are removed, this will allow the reverse trip lever to not engage any stops allowing the sprinkler head to operate in a full circle mode.

**CAUTION:** When removing the adjustable stops, place sprinkler head horizontal with the sprinkler laying on a flat surface to catch the clip as it is removed. Protect eyes when removing clips as they are under some spring tension.

## Step 2



### Step 2) IMPORTANT: REVERSE VS. FORWARD MODE

If you set the sprinkler head for full circle operation, the reverse lever will either stay to the right or left for reverse or forward mode. Typically when using the sprinkler in full circle operation, you will want the sprinkler to be set in forward mode or a clockwise operating direction. For this to occur, you want the reverse lever at the back of the sprinkler to be over to the left as shown. If the lever is set to the right, the sprinkler will be in reverse mode. In reverse mode, the sprinkler will operate rapidly in a counterclockwise direction and your distance of throw will be less than it will in forward mode.

# Warranty

## **LIMITED WARRANTY AND REMEDY:**

### WARRANTY

BigSprinkler.com warrants to the original purchaser only of the products described in the face hereof as of the date of the original invoice, that the product is merchantable and free from defects in material and workmanship.

Warranty shall be provided by the original manufacturer of products sold on BigSprinkler.com for the length of time specified by the manufacturer of the given product.

Sprinkler Stands - 1 year

Sprinkler Heads - 1 year

### REMEDY

If BigSprinkler.com determines that the above warranty was breached with respect to any part or component provided by the manufacturer of the product (and if all conditions set forth below have been satisfied) then, BigSprinkler.com will (at BigSprinkler.com's option) provide purchaser a refund of the purchase price less the freight costs to or from the customer, or provide a replacement product of the same kind.

All remedies provided herein are for goods only, no labor or freight allowance for return goods is implied.

This warranty extends only to the original purchaser of products purchased from BigSprinkler.com.

### CONDITIONS TO ENFORCEABILITY AND CLAIMS:

1. Product has been maintained and operated within the guidelines outlined in the manufacturer's product guide and maintenance manual.
2. Product warranty shall be considered void if any component or function of the equipment has been altered in any form other than what has been provided or intended by the original product manufacturer.
3. Any return must be submitted on form provided by BigSprinkler.com in writing immediately and in no event longer than 20 days from occurrence. You can reach our sales department through the "contact us" form on our website should such an event occur.
4. Purchaser must return all goods within 30 days of BigSprinkler.com's authorization date, that have been determined by BigSprinkler.com to be defective to the Purchaser with Purchaser being responsible for freight.

### LIMITATIONS:

BigSprinkler.com or its affiliates shall not be liable for any incidental or consequential damages (including but not limited to, damages for injury to the person, property or lost turf, crops or profits) by reason of any defect in the products sold or its manufacture, design, or function.